


End splice with double braided rope


1. Make a knot 2 m from the end of the rope.
2. Mark A one fid length from the end of the rope, and B so you get the desired size of the eye. A and B will be put together to form the eye. If you want to insert a kous, then verify with the kous that the length A to B is suitable:



3. Take out the core at B. Mark the core with B' where it exits the cover.
4. Pull some of the core out from the cover, so you can measure C one fid length further away from the end than B', and D 3/4 fid further away from the end than C.
5. Insert the cover inside the core from C to D using the fid:

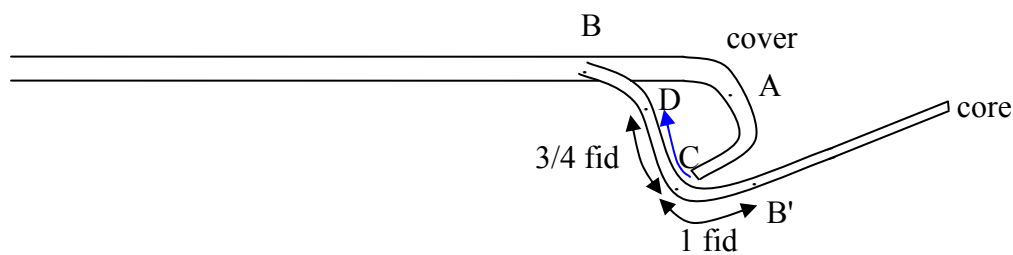


6. Thin the cover, pull the cover back, so it stops just inside the core at D.
7. Put a needle through the core and cover at C, to prevent accidentally pulling out the cover from the core, see drawing below.
8. Use the fid to put the core inside the cover from A to B and about 5 to 10 cm further behind B, exiting at E:

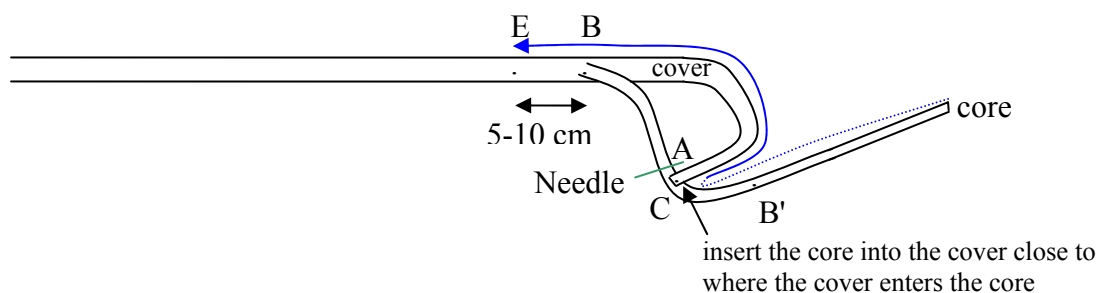


9. Remove the needle. Pull the cover from the knot you made in step 1 over the eye, optionally insert the kous.
10. Mark where the core exits (F).
11. Pull out the core. Cut the core at F, and thin the core.
12. Pull back the cover, so the core will go back inside the cover. Make sure the cover in the eye is filled with core.
13. Optionally tack, but it is not necessary.

End splice with double braided rope

1. Make a knot 2 m from the end of the rope.
2. Take out the core 1 fid length from the end:

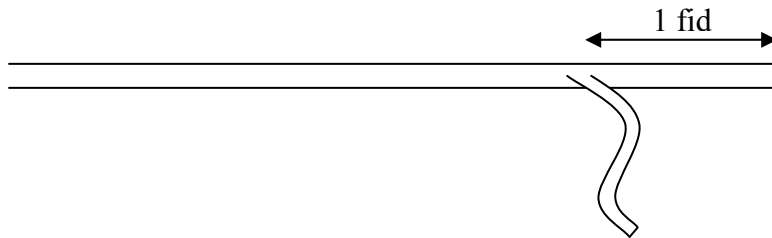


3. Pull the cover as far as possible towards the end:

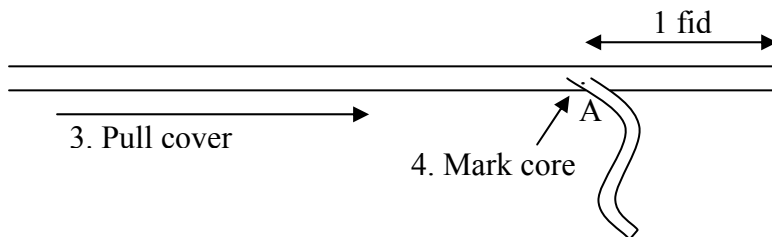


4. Mark where the core exists the cover (A).

5. Pull the core out, and mark B 1/3 fid length further from the end than A, and C 1 fid length further away from the end than B:

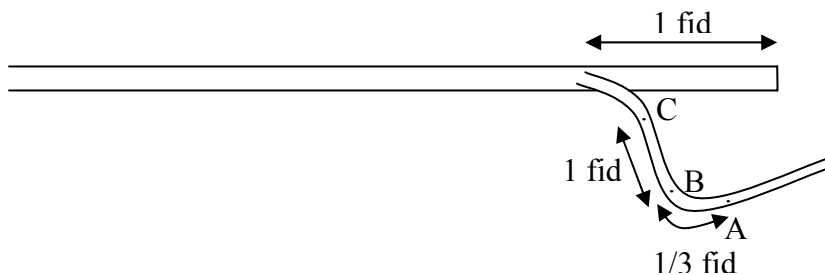

6. Use the fid to insert cover through the core from B to C:

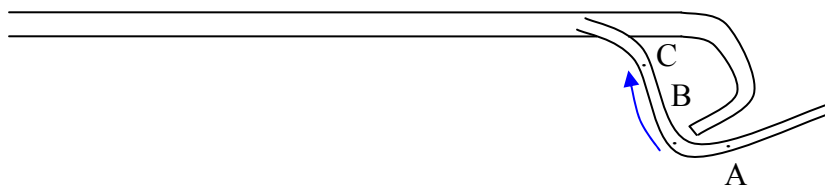

7. Cut about 1/6 fid off the end of the cover and thin the cover.
8. Ensure B is next to the point where the core exits the cover. Smoothen the core. Cut the end of the cover if there is any excess.
9. Pull cover over the core (start from the knot 2 m from the end you made in step 1).
10. Optionally tack the end with some waxed thread.
11. Cut core.